


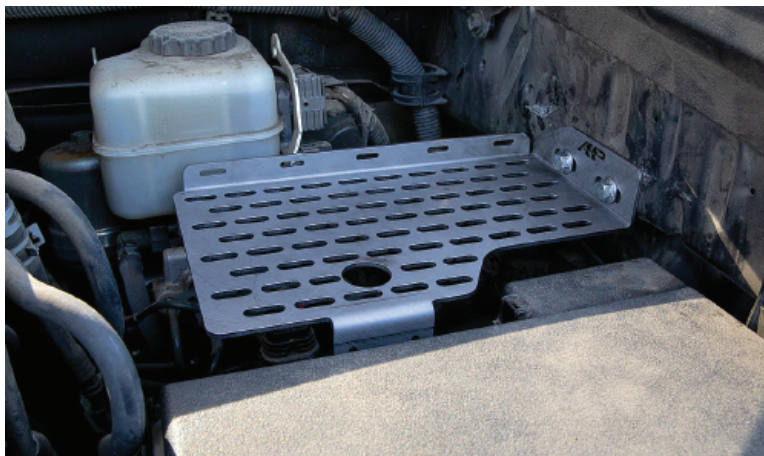




## INSTALLATION INSTRUCTIONS FOR 2010-2019 TOYOTA 4RUNNER ENGINE BAY ACCESSORY TRAY, DRIVER SIDE

	<p><b>NOTICE</b></p> <p>Read instructions completely before installing this product. Refer back to the instructions frequently during installation.</p>		<p><b>CAUTION</b></p> <p>Flying Object Hazard. Fluid Splash Hazard.</p> <p>Wear safety glasses at all times when working on vehicle.</p>
<p> <b>WARNING:</b> Cancer and Reproductive Harm - <a href="http://www.P65Warnings.ca.gov">www.P65Warnings.ca.gov</a></p>			



1. Open the hood and locate the space above the fuse box on the driver side of the engine bay.



**AP-311402**

2. Unbolt the stock bolt holding the small electrical connector on the inner fender well. This will need a 10mm socket and extension.

3. Place the Electrical Mounting Bracket underneath the existing bracket.



4. Align both mounting holes and loosely put the stock screw back on.

5. Loosely fit the two 12mm bolts on the side of the bracket.



6. Once the bracket is in the desired position first tighten the bottom bolt then the two side bolts.



7. Complete